

Programming a Remote

1. Unscrew the control box (on the gate) housing screws and remove face plate carefully
2. Press and hold the 'F' button on the circuit board until 'FF' starts to flash
3. Press any button on the remote you are trying to program. If 'FF' disappears on the screen, programming is successful.
4. Reassemble the control box